

**Step 6.** Place the flat side of the u-clamp inside the circular groove of the socket (see Pictures 9 and 10).

**Picture 9**




**Picture 10**




**Step 7.** Once the u-clamp is in the groove of the socket, turn the u-clamp 45° to lock into place (see Picture 11).

**Picture 11**

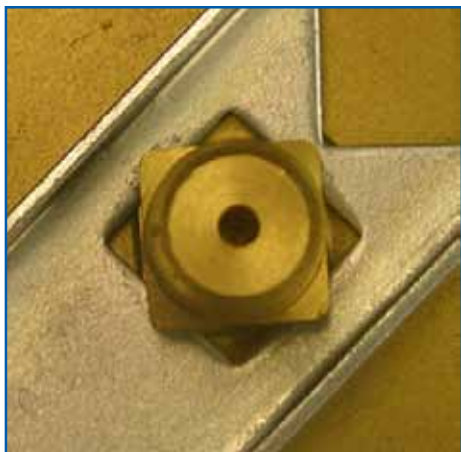

**Step 8.** Evenly tighten the screws on each side of the u-clamp in order to secure the gauge to the panel (see Picture 12).

**Picture 12**

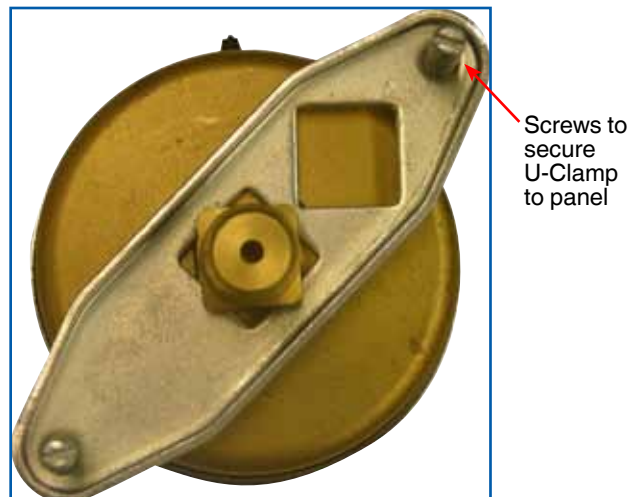

#### **If ordered from the factory**

If the gauge is ordered from the factory with a u-clamp, then the gauge will come with the profile ring already installed. This profile ring is slightly different from the one in the kit as it comes crimped onto the gauge instead of screw retained (see Picture 13).

**Picture 13**

